

# SYNERGY PENTAGON DOOR


## **Installation Instructions**


Please pass on to user


#### WARNING!

This product weighs in excess of 19kgs.

- Please read the instructions fully before commencing installation
- Check for transit damage and shortages.
   No claim for damage can be accepted after installation.
- Keep these instructions for reference.
- Handle product with care, avoiding knocks and shock loading to all sides and edges of the glass.

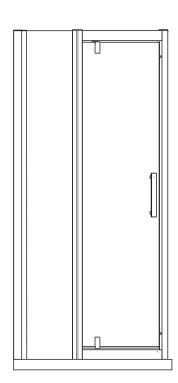

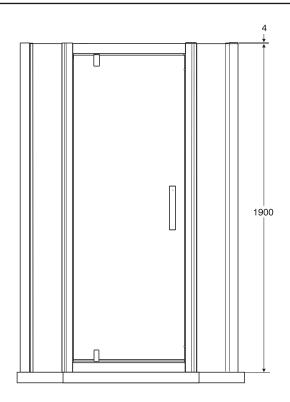

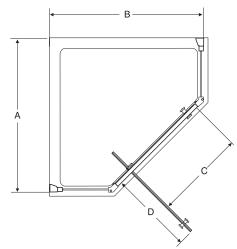


Pentagon	Dim. A	Dim. B	Dim. C	Dim. D
enclosure	Width (mm)	Width (mm)	Opening (mm)	Reach (mm)
800	763-788	763-788	450	420
900	873-898	873-898	520	485


# **COMPONENTS LEGEND**

Pack 1 **Panels** Ref F1 F2 x 2




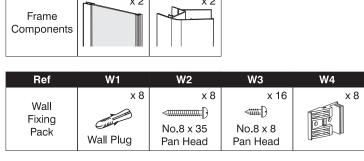


Door

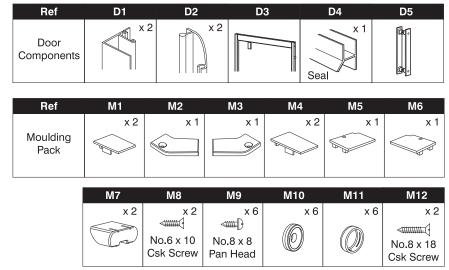

#### **TOOLS REQUIRED**








This product is heavy and may require two people to install














### SYNERGY PENTAGON DOOR

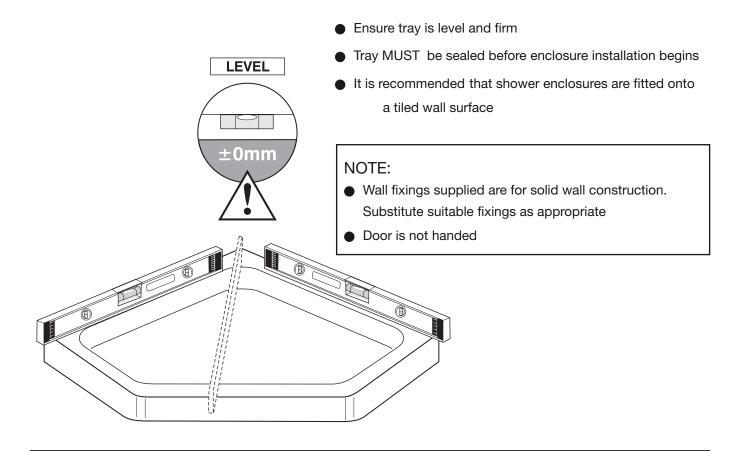


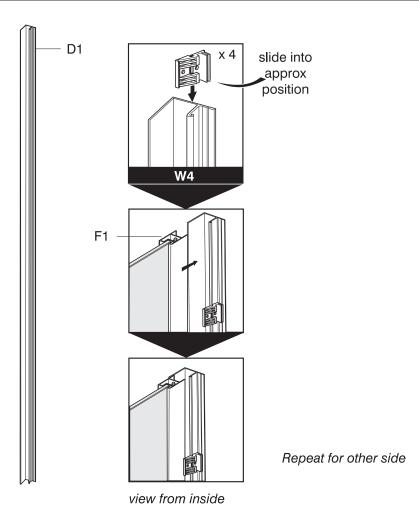


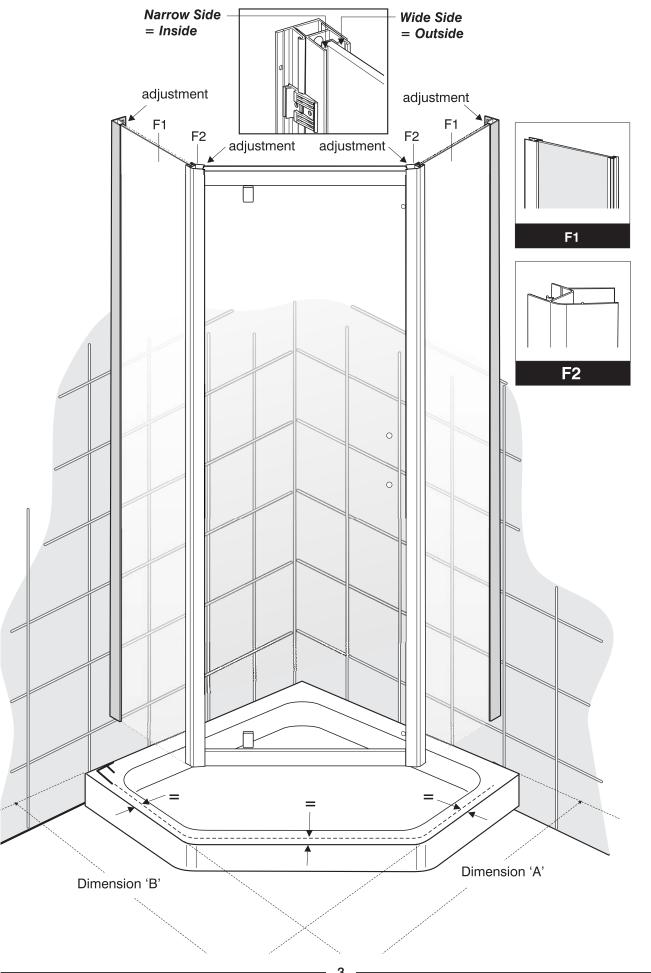


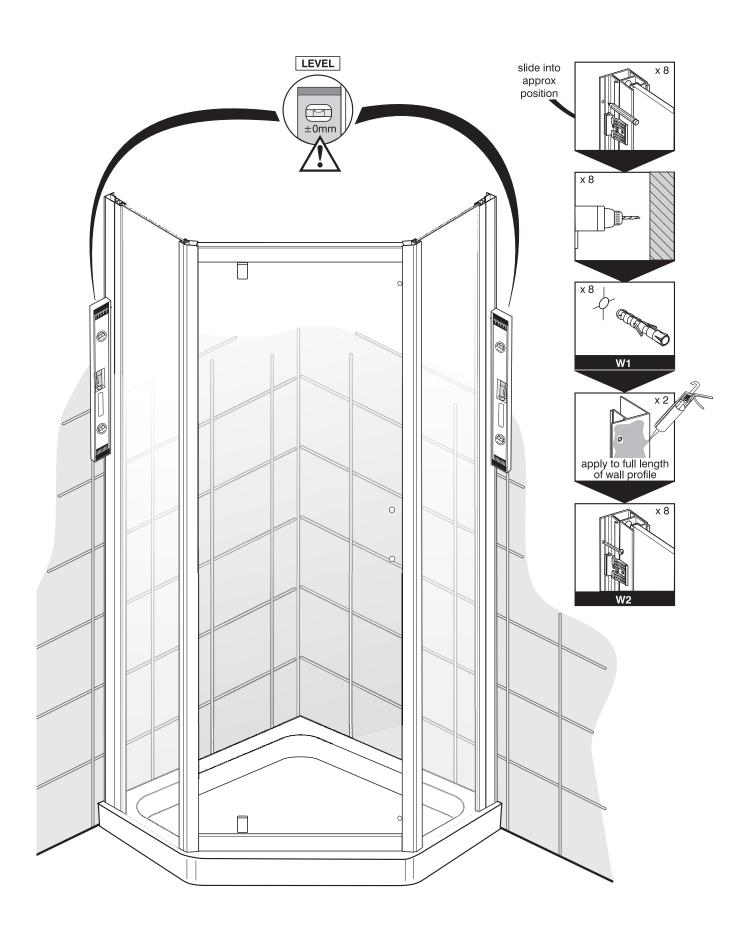


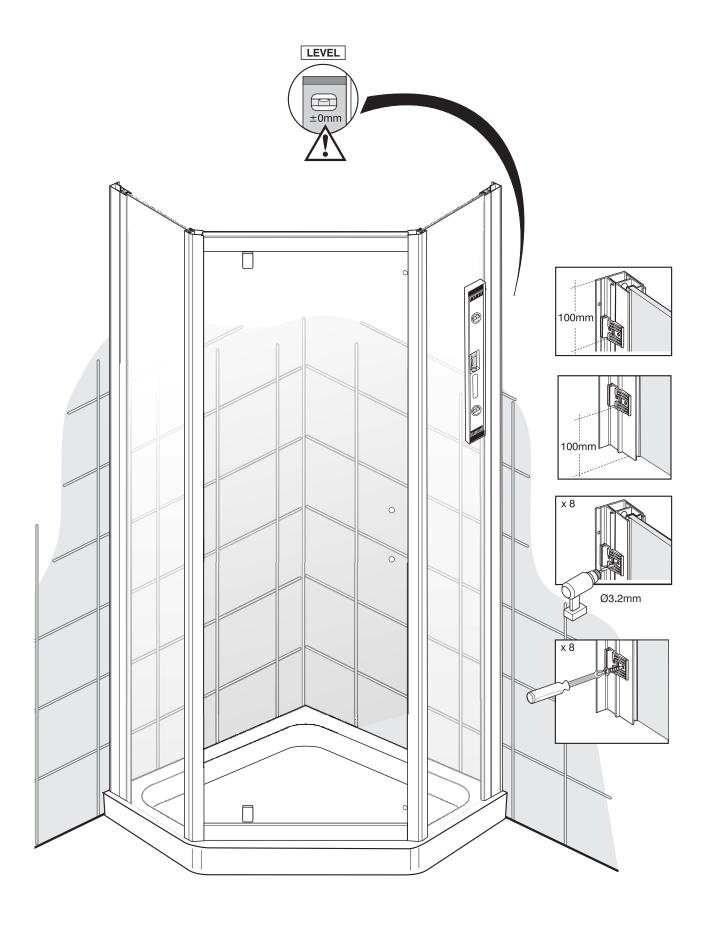


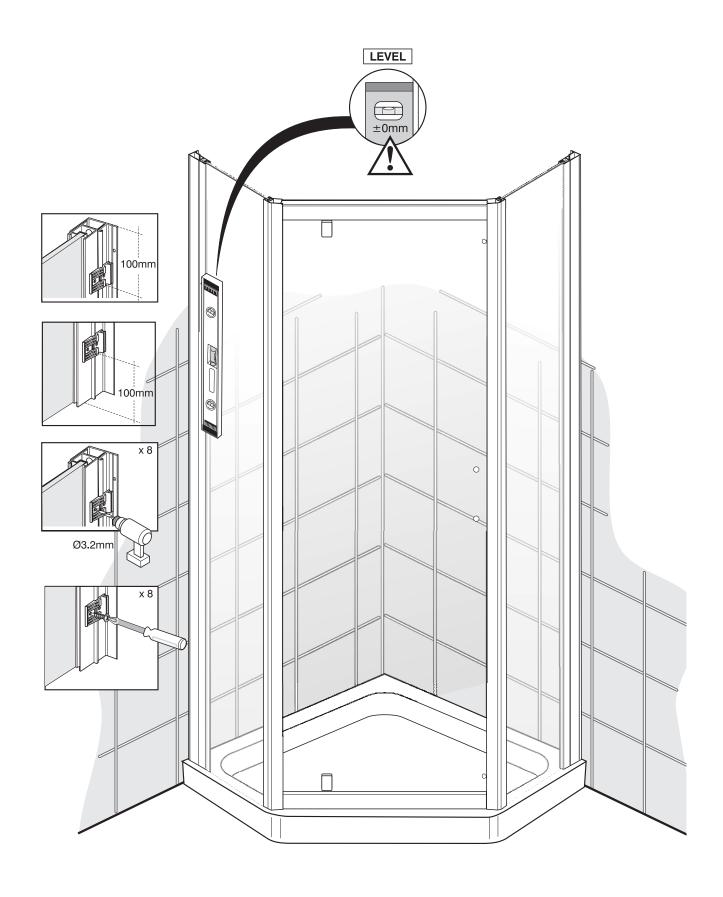

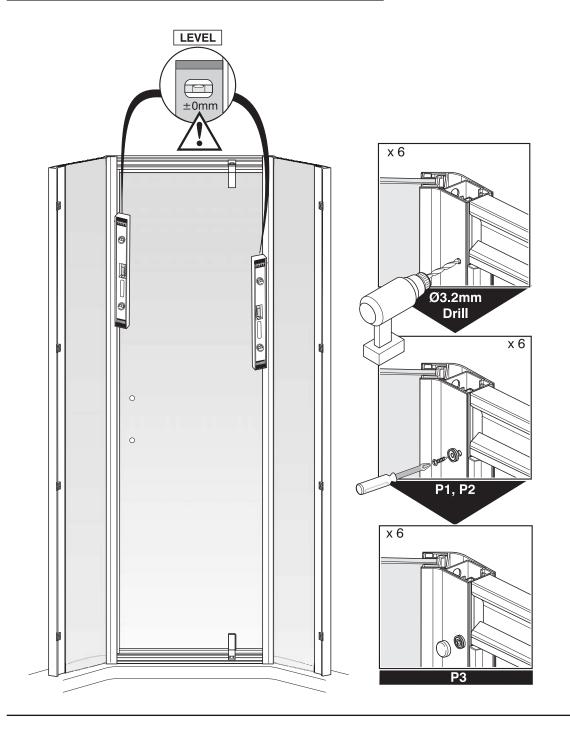


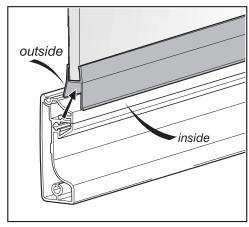





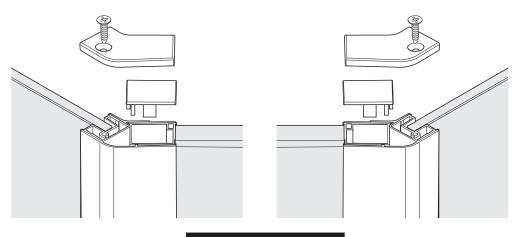


M1, M2, M3, M8

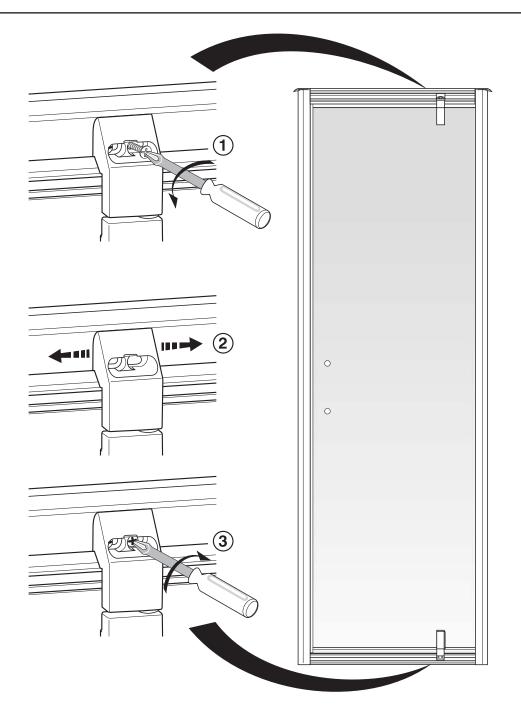

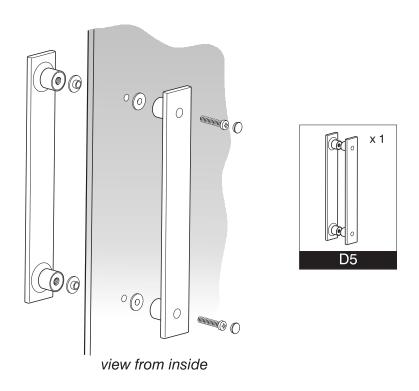

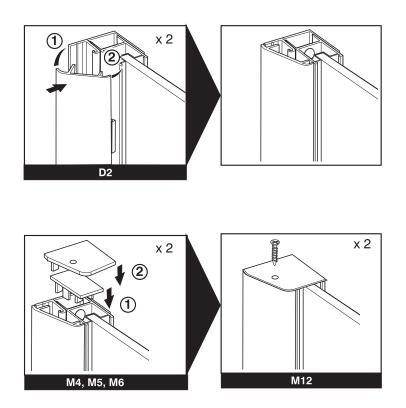


view from inside

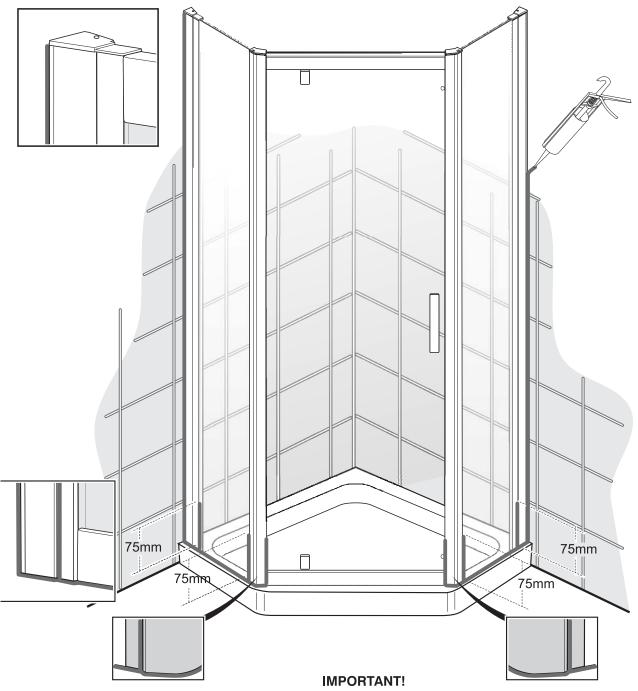

The shower enclosure must be sealed ONLY on the outside. DO NOT SEAL on the inside, should this process not be respected, the company will not assume the responsibility of any water leakage.



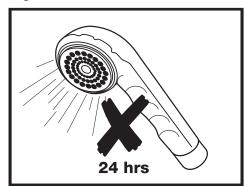

#### AFTERCARE INSTRUCTIONS

This product has an 'Idealclean' coating on the glass, which makes the glass easier to clean.

The following cleaning instructions need to be followed so as not to damage the coating.

After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluable lime salts may be deposited and allowed to build up.

Cleaners of a gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers.

Glass cleaners can be used but with caution, if in doubt, contact the manufacturer of the cleaner in question.

Please keep these instructions for aftercare and customer service details.



The Bathroom Works
National Avenue
Kingston upon Hull
HU5 4HS
England
Telephone: (01482) 346461
Telefax: (01482) 445886.

# **01482 496318**

CUSTOMER CARE FAX LINE 01482 499611 email: customercare@idealstandard.com

Ideal Standard pursues a policy of continuing improvement in design and performance of its products. The right is, therefore, reserved to vary specifications without notice.